


# Tonelux

## SM1 and SM2 Quick Reference Sheet

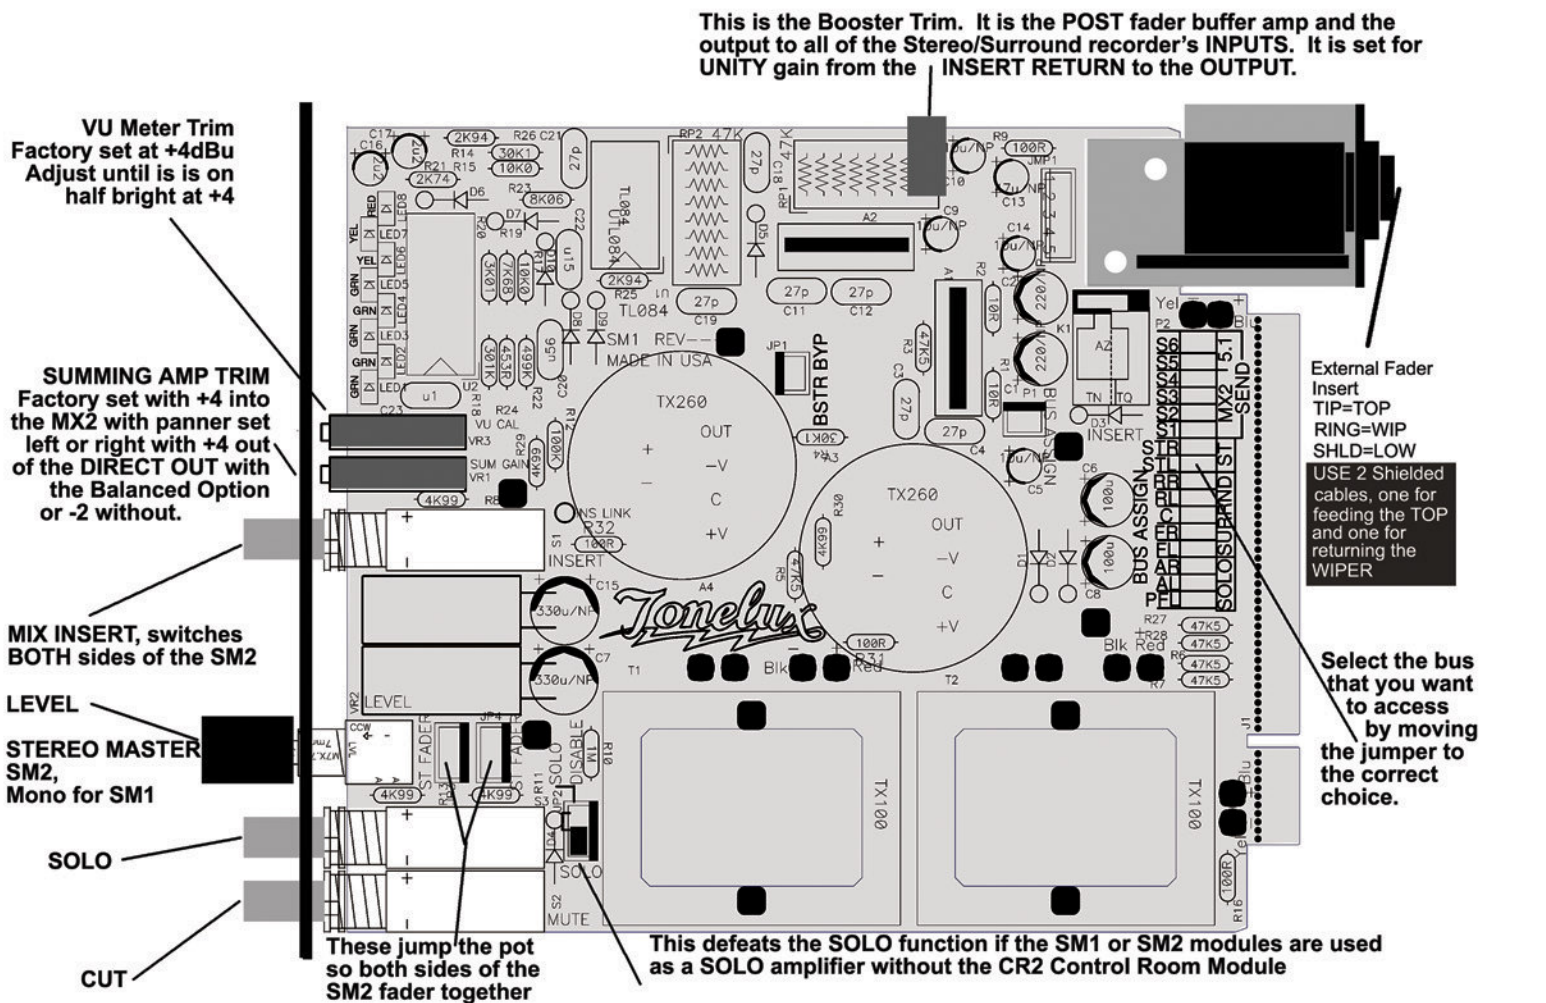

### NOTES:

- 1 The Summing input comes from the motherboard and is selected with the JUMPER as shown.
- 2 The Summing amp output (ACA OUT) is the D-SUB marked "INPUT" on the rear of the V-RACK.
- 3 The Booster amp input is the D-sub marked "INSERT RETURN" on the rear of the V-RACK.
- 4 Insert a STEREO FADER at the "External Fader Input" jack on the rear of the unit. Plug LEFT into one and RIGHT into the other as noted.
5. The front panel "FDR" is not designed for actual fading. Use an external, calibrated, high quality stereo linear fader for that purpose.